



HITACHI

MODEL NT 65AA
MODÈLE NT 65MA
MODELO NT 65MA

FINISH NAILER
CLOUEUR DE FINITION
MARTILLO NEUMÁTICO PARA ACABADO

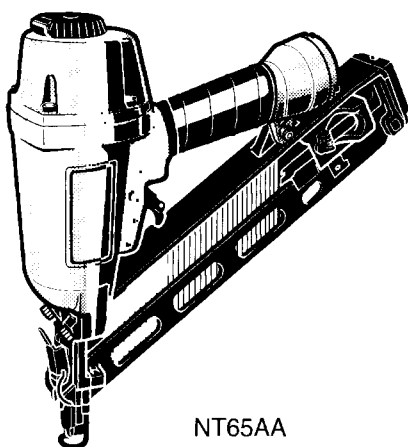

NT65AA

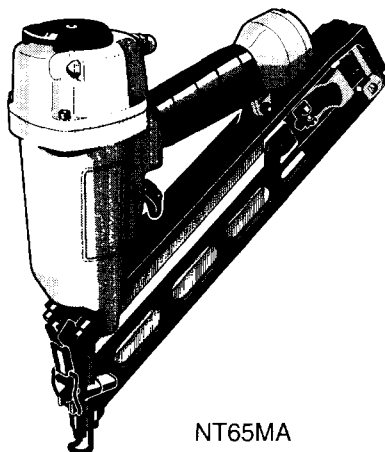

NT65MA

INSTRUCTION MANUAL AND SAFETY INSTRUCTIONS

DANGER

Improper and unsafe use of this Nailer will result in death or serious injury !
This Manual contains important information about product safety.
Read and understand this Manual before operating the Nailer.
Keep this Manual available for others before they use the Nailer.

MODE D'EMPLOI ET INSTRUCTIONS DE SECURITE

DANGER

Une utilisation incorrecte et sans respecter la sécurité de ce cloueur risque d'entraîner la mort ou des blessures graves !
Ce manuel renferme des instructions importantes sur la sécurité de l'outil.
Lire et bien assimiler ce manuel avant d'utiliser le cloueur.
Conserver ce manuel à l'intention des autres utilisateurs du cloueur.

MANUAL DE INSTRUCCIONES E INSTRUCCIONES DE SEGURIDAD

PELIGRO

¡La utilización inadecuada e insegura de este martillo neumático puede resultar en lesiones serias o en la muerte !
Este manual contiene información importante sobre la seguridad del producto.
Lea y entienda este manual antes de utilizar el martillo neumático.
Guarde este manual a mano para que puedan consultarlo otras personas antes de utilizar el martillo neumático.

CONTENTS

English	page	page	
IMPORTANT INFORMATION	3	AIR SUPPLY	10
DEFINITIONS OF SIGNAL WORDS	3	LUBRICATION	12
SAFETY		COLD WEATHER CARE	13
IMPORTANT SAFETY INSTRUCTIONS		TESTING THE NAILER	13
FOR USING NAILERS	4	ADJUSTING AIR PRESSURE	15
EMPLOYER'S RESPONSIBILITIES	7	LOADING NAILS	15
		NAILER OPERATION	16
OPERATION		METHODS OF OPERATION	17
NAME OF PARTS	8	ADJUSTING THE NAILING DEPTH	19
SPECIFICATIONS	9	USING THE BLOW NOZZLE	19
NAIL SELECTION	9	CHANGING THE EXHAUST DIRECTION	20
ACCESSORIES	9	USING THE NOSE CAP	20
STANDARD ACCESSORIES	9		
OPTIONAL ACCESSORIES	10	MAINTENANCE	
APPLICATIONS	10	MAINTENANCE AND INSPECTION	21
BEFORE OPERATION	10	SERVICE AND REPAIRS	22
WORKING ENVIRONMENT	10	PARTS LIST	68

TABLE DE MATIERES

Français		TABLE DE MATIÈRES	
	page		page
INFORMATION IMPORTANTE	24	ALIMENTATION D'AIR	32
DEFINITION DES MOTS DE SIGNALISATION	24	GRAISSAGE	34
SECURITE		ENTRETIEN PAR TEMPS FROID	35
CONSIGNES DE SECURITE IMPORTANTES		ESSAI DU CLOUEUR	35
POUR L'UTILISATION DU CLOUEUR	25	REGLAGE DE LA PRESSION D'AIR	37
RESPONSABILITES DE L'EMPLOYEUR	29	CHARGEMENT DES CLOUS	37
		UTILISATION DU CLOUEUR	38
UTILISATION		MÉTHODES D'UTILISATION	39
NOM DES PEICES	30	REGLAGE DE LA PROFONDEUR DE CLOUAGE	41
SPECIFICATIONS	31	UTILISATION DE LA BUSE DE PROJECTION D'AIR	42
SELECTION DES CLOUS	31	CHANGEMENT DU D'ÉCHAPPEMENT	42
ACCESSOIRES	31	UTILISATION DU CAPUCHON DE BEC	42
ACCESSOIRES STANDARD	31		
ACCESSOIRES EN OPTION	32	ENTRETIEN	
APPLICATIONS	32	ENTRETIEN ET INSPECTION	43
AVANT L'UTILISATION	32	ENTRETIEN ET REPARATIONS	44
ENVIRONNEMENT DE TRAVAIL	32	LISTE DES PIÈCES	68

ÍNDICE

Español

INDICE

Página

INFORMACIÓN IMPORTANTE

DEFINICIÓN DE LAS PALABRAS CLAVE.....

SEGURIDAD

INSTRUCCIONES IMPORTANTES DE SEGURIDAD PARA
LA UTILIZACIÓN DEL MARTILLO NEUMÁTICO

RESPONSABILIDADES DEL EMPRESARIO

OPERACIÓN

NOMENCLATURA

ESPECIFICACIONES

SELECCIÓN DE PUNTAS

ACCESORIOS.....

ACCESORIOS ESTÁNDAR

ACCESORIOS OPCIONALES

APLICACIONES

ANTES DE LA OPERACIÓN

ENTORNO DE TRABAJO

46

46

47

51

52

53

53

53

53

54

54

54

54

54

Página

SUMINISTRO DE AIRE

LUBRICACIÓN

CUIDADOS PARA CLIMAS FRÍOS

PRUEBA DEL MARTILLO NEUMÁTICO

AJUSTE DE LA PRESIÓN DE AIRE

CARGA DE PUNTAS

OPERACIÓN DEL MARTILLO NEUMÁTICO

MÉTODOS DE OPERACIÓN

AJUSTE DE LA PROFUNDIDAD DE CLAVADO

EMPLEO DE LA BOQUILLA DE SOPLO

CAMBIO DEL SENTIDO DEL AIRE DE ESCAPE

UTILIZACIÓN DE LA TAPA PARA EL MORRO

MANTENIMIENTO

MANTENIMIENTO E INSPECCIÓN

SERVICIO Y REPARACIONES

LISTA DE PIEZAS

54

56

57

57

59

59

60

61

63

64

64

65

66

68

IMPORTANT INFORMATION

READ AND UNDERSTAND ALL OF THE OPERATING INSTRUCTIONS, SAFETY PRECAUTIONS AND WARNINGS IN THIS MANUAL BEFORE OPERATING OR MAINTAINING THIS NAILER.

Most accidents that result from the operation and maintenance of Nailers are caused by the failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing a potentially hazardous situation before it occurs, and by observing appropriate safety procedures.

Basic safety precautions are outlined in the "SAFETY" section of this Manual and in the sections which contain the operation and maintenance instructions.

Hazards that must be avoided to prevent bodily injury or machine damage are identified by DANGERS and WARNINGS on the Nailer and in this Manual.

Never use this Nailer for applications other than those specified in this Manual.

DEFINITIONS OF SIGNAL WORDS

DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, or may cause machine damage.

NOTE emphasizes essential information.

SAFETY


IMPORTANT SAFETY INSTRUCTIONS

FOR USING NAILERS

READ ALL INSTRUCTIONS

DANGER

1. ALWAYS WEAR EYE PROTECTOR.

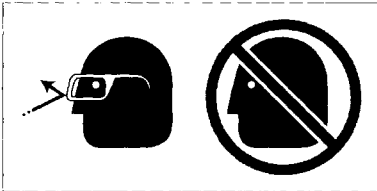

When operating the Nailer, always wear eye protector, and make sure others in work area wear eye protector, too.

Eye protector must conform to the requirements of American National Standards Institute, ANSI Z87.1 and provide protection against flying particles both from the front and side.

The employer must enforce the use of eye protector by the Nailer operator and others in work area.

2. NEVER USE BOTTLED GASES.




Never use oxygen, combustible gases or any other bottled gases as a power source for the Nailer.

Use of the above gases is dangerous, as the Nailer will explode. Use only clean, dry, regulated compressed air.

WARNING

3. DO NOT EXCEED 120 psi.

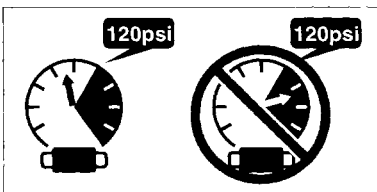

Do not exceed maximum recommended air pressure 120 psi (8.3 bar 8.5 kgf/cm²).

Never connect the Nailer to pressure which potentially exceeds 200 psi (13.7 bar 14 kgf/cm²) as the Nailer can burst.

4. NEVER POINT NAILER TOWARD YOURSELF OR ANYONE ELSE.

Always assume the Nailer contains fasteners.

Never point the Nailer toward yourself or anyone else, whether it contains fasteners or not.

If fasteners are mistakenly driven, it can lead to severe injuries.

Never engage in horseplay with the Nailer.

Respect the Nailer as a working implement.

5. NEVER CARRY WITH FINGER ON TRIGGER.

Remove finger from trigger when not driving fasteners.

Never carry the Nailer with finger on trigger since you could drive a fastener unintentionally and injure yourself or someone else.

Always carry the Nailer by the handle only.

6. BE CAREFUL OF THE FOLLOWING WHEN USING BLOW NOZZLE

1) Do not touch the trigger.

2) Do not point the nose (air outlet) at a person.

3) Do not touch the push lever or set it to pushed up status.

Flying nails can cause severe injury.

7. ALWAYS WEAR EAR AND HEAD PROTECTOR.

Always wear ear protector to protect your ears from loud noise.

Always wear head protector to protect your head from flying objects.

8. STORE NAILER PROPERLY.

When not in use, the Nailer should be stored in a dry place. Keep out of reach of children. Lock the storage area.

9. KEEP WORK AREA CLEAN.

Cluttered areas invite injuries. Clear all work areas of unnecessary tools, debris, furniture, etc.

10. NEVER USE IN PRESENCE OF FLAMMABLE LIQUIDS OR GASES.

The Nailer produces sparks during operation.

Never use the Nailer in sites containing lacquer, paint, benzine, thinner, gasoline, gases, adhesive agents, and other materials which are combustible or explosive.

11. KEEP VISITORS AWAY.

Do not let visitors handle the Nailer.

All visitors should be kept safely away from work area.

12. DRESS PROPERLY.

Do not wear loose clothing or jewelry as they can be caught in moving parts. Rubber gloves and nonskid footwear are recommended when working outdoors.

Wear protective hair covering to contain long hair.

13. NEVER USE NON RELIEVING COUPLER ON NAILER.

If a non relieving coupler is used on the Nailer, the Nailer can remain charged with air after disconnecting and thus will be able to drive a fastener even after disconnecting.

The Nailer and air hose must have a hose coupling such that all pressure is removed from the Nailer when the coupling joint is disconnected.

14. CHECK PUSH LEVER BEFORE USE.

Make sure the push lever operates properly. (The push lever may be called "Safety".) Never use the Nailer unless the push lever is operating properly, otherwise the Nailer could drive a fastener unexpectedly. Do not tamper with or remove the push lever, otherwise the push lever becomes inoperable.

15. KEEP ALL SCREWS AND COVERS TIGHTLY IN PLACE.

Keep all screws and covers tightly mounted. Check their condition periodically.

Never use ther Nailer if parts are missing or damaged.

16. DO NOT LOAD FASTENERS WITH TRIGGER PULLED OR PUSH LEVER DEPRESSED.

When loading fasteners into the Nailer or when connecting the air hose.

SAFETY - Continued

- 1) do not pull the trigger;
- 2) do not depress the push lever; and
- 3) keep the Nailer pointed downward.

17. KEEP HANDS AND FEET AWAY FROM FIRING HEAD DURING USE.

Never place your hands or feet closer than 8 inches from the firing head.

A serious injury can result if the fasteners are deflected by the workpiece, or are driven away from the point of entry.

18. PLACE NAILER PROPERLY ON WORKPIECE.

Do not drive fasteners on top of other fasteners or with the Nailer at too steep of an angle; the fasteners can ricochet and hurt someone.

19. BE CAREFUL OF DOUBLE FIRE DUE TO RECOIL.

If the push lever is unintentionally allowed to re-contact the workpiece following recoil, an unwanted fastener will be driven.

In order to avoid this undesirable double fire.

- 1) do not push the Nailer on the workpiece with strong force;
- 2) take the Nailer completely away from the workpiece using recoil, and keep the push lever away from the workpiece until the next desirable shot; and
- 3) pull the trigger and release it QUICKLY when performing intermittent operation (trigger fire).

20. DO NOT DRIVE FASTENERS INTO THIN BOARDS OR NEAR CORNERS AND EDGES OF WORKPIECE.

The fasteners can be driven through or away from the workpiece and hit someone.

21. NEVER DRIVE FASTENERS FROM BOTH SIDES OF A WALL AT THE SAME TIME.

The fasteners can be driven into and through the wall and hit a person on the opposite side.

22. CHECK FOR LIVE WIRES.

Avoid the risk of severe electrical shock by checking for live electrical wires that may be hidden by walls, floors or ceilings. Turn off the breaker switch to ensure there are no live wires.

23. NEVER CARRY NAILER BY HOSE.

24. DO NOT OVERREACH.

Keep proper footing and balance at all times.

25. NEVER USE NAILER WHICH IS DEFECTIVE OR OPERATING ABNORMALLY.

If the Nailer appears to be operating unusually, making strange noises, or otherwise appears defective, stop using it immediately and arrange for repairs by a Hitachi authorized service center.

26. DO NOT DISCONNECT AIR HOSE FROM NAILER WITH FINGER ON TRIGGER.

The Nailer can fire when re-connected to an air supply.

27. DISCONNECT AIR HOSE FROM NAILER WHEN:

- 1) doing maintenance and inspection;
- 2) attaching or removing the nose cap;
- 3) clearing a jam;
- 4) it is not in use;

- 5) leaving work area;
- 6) moving it to another location; and
- 7) handing it to another person.

Never attempt to clear a jam or repair the Nailer unless you have disconnected air hose from the Nailer and removed all remaining fasteners from the Nailer.

The Nailer should never be left unattended since people who are not familiar with the Nailer might handle it and injure themselves.

28. STAY ALERT.

Watch what you are doing. Use common sense.

Do not operate the Nailer when you are tired.

The Nailer should never be used by you if you are under the influence of alcohol, drugs or medication that makes you drowsy.

29. HANDLE NAILER CORRECTLY.

Operate the Nailer according to this Manual.

Never allow the Nailer to be operated by children, individuals unfamiliar with its operation or unauthorized personnel.

30. NEVER USE NAILER FOR APPLICATIONS OTHER THAN THOSE SPECIFIED IN THIS MANUAL.

31. HANDLE NAILER CAREFULLY.

Because of high air pressure in the Nailer, cracks in the surface are dangerous.

To avoid this, do not drop the Nailer or strike the Nailer against hard surfaces; and do not scratch or engrave signs on the Nailer.

Handle the Nailer carefully.

32. MAINTAIN NAILER WITH CARE.

Keep the Nailer clean and lubricated for better and safer performance.

33. USE ONLY PARTS, ACCESSORIES OR FASTENERS SUPPLIED OR RECOMMENDED BY HITACHI.

Unauthorized parts, accessories, or fasteners may void your warranty and can lead to malfunction and resulting injuries.

Only service personnel trained by Hitachi, distributor or employer shall repair the Nailer.

Never modify or alter a nailer. Doing so may cause it to malfunction and personal injuries may result.

EMPLOYER'S RESPONSIBILITIES

1. Ensure that this MANUAL is available to operators and personnel performing maintenance.
2. Ensure that Nailers are used only when operators and others in work area are wearing EYE PROTECTOR.
3. Enforce the use of EYE PROTECTOR by operators and others in work area.
4. Keep Nailers in safe working order.
5. Maintain Nailers properly.
6. Ensure that Nailers which require repair are not further used before repair.

SAVE THIS MANUAL AND KEEP IT AVAILABLE FOR OTHERS!


OPERATION

NOTE:


The information contained in this Manual is designed to assist you in the safe operation of the Nailer.

Some illustrations in this Manual may show details or attachments that differ from those on your own Nailer.

NAME OF PARTS

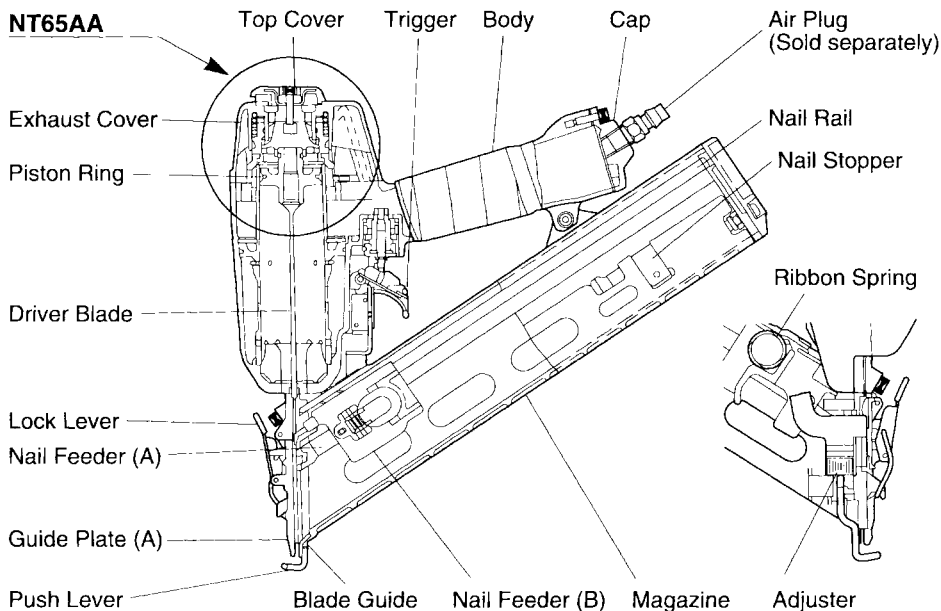

NT65MA


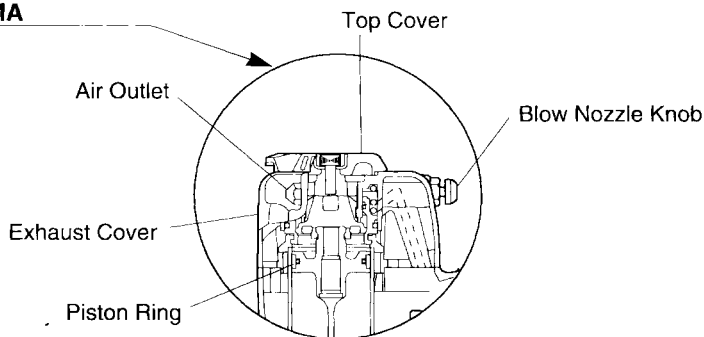


SPECIFICATIONS

Model	NT65AA	NT65MA
Operating pressure	70—120 psi (4.9—8.3 bar 5—8.5 kgf/cm ²)	
Dimensions	13-17/32"×12"×3-7/32"	
Length×Height×Width	(344mm × 305mm × 82mm)	
Weight	4.2 lbs (1.9kg)	4.4 lbs (2.0kg)
Nail capacity	100 Nails	
Air consumption	.042 ft ³ /cycle at 100 psi (1.20 ltr/cycle at 6.9 bar) (1.20 ltr/cycle at 7 kgf/cm ²)	
Air inlet	3/8 NPT Thread	

NAIL SELECTION

Only nails shown in the Table below can be driven with this Nailer.

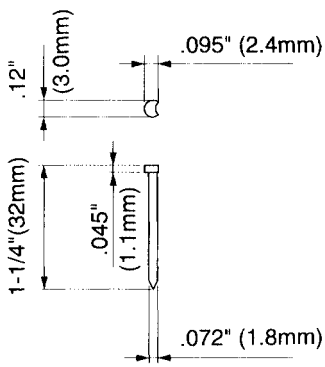
Dimensions of nails	
15 Gauge Finish	
Min.	Max.
	

ACCESSORIES

⚠ WARNING

- Accessories other than those shown below can lead to malfunction and resulting injuries.

STANDARD ACCESSORIES

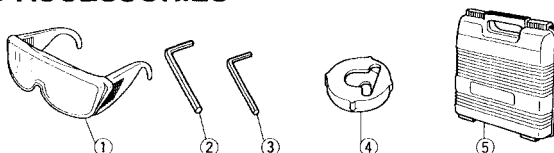

①	Eye protector	1
②	Allen wrench for M6 screw	1
③	Allen wrench for M5 screw	1
④	Nose Cap	1
⑤	Case	1

OPTIONAL ACCESSORIES...sold separately

- Sequential Trip Mechanism Kit (Code No. 880414)
(Single Shot Parts)
- Pneumatic Tool Lubricant
 - 1 oz. (30cc) oil feeder (Code No. 877153)
 - 4 oz. (120cc) oil feeder (Code No. 874042)
 - 1 quart (1 ltr) can (Code No. 876212)

NOTE : Accessories are subject to change without any obligation on the part of HITACHI.

APPLICATIONS

- Manufactured Housing, On-site and Mobile Home Construction.
- Cabinets, Furniture, and Woodworking.

BEFORE OPERATION

Read section titled "SAFETY" (page 4-7).

Make sure of the followings before operation.

WORKING ENVIRONMENT

WARNING

- No flammable gas, liquid or other flammable objects at worksite.
- Clear the area of children or unauthorized personnel.

AIR SUPPLY

DANGER



- Never use oxygen, combustible gases or any other bottled gases.

⚠ WARNING

- **Never connect Nailer to pressure which potentially exceeds 200 psi (13.7 bar 14 kgf/cm²)**
- **Never use non relieving coupler on Nailer.**

1. Power source

- Use only clean, dry, regulated compressed air as a power source for this Nailer.
- Air compressors used to supply compressed air to this Nailer must comply with the requirements of the latest version of ANSI Standard B 19.3 "Safety Standard For Compressors For Process Industries. "
- Moisture or oil in the air compressor may accelerate wear and corrosion in the Nailer.
Drain daily.

2. Filter-Regulator-Lubricator

- Use a regulator with a pressure range of 0 — 120 psi (0 — 8.3 bar 0 — 8.5 kgf/cm²).
- Filter-regulator-lubricator units supply an optimum condition for the Nailer and extend the Nailer life. These units should always be used.

Filter The filter removes moisture and dirt mixed in compressed air.

Drain daily unless fitted with an automatic drain.

Keep the filter clean by regular maintenance.


Regulator.....The regulator controls the operating pressure for safe operation of the Nailer.

Inspect the regulator before operation to be sure it operates properly.

Lubricator.....The lubricator supplies an oil mist to the Nailer.

Inspect the lubricator before operation to be sure the supply of lubricant is adequate.

Use Hitachi pneumatic tool lubricant.

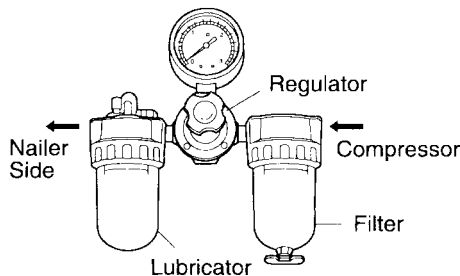


3. Air hose

- Air hose must have a minimum working pressure rating of 150 psi (10.4 bar 10.6 kgf/cm²) or 150% of the maximum pressure produced in the system, whichever is higher.

4. Hose coupling

- The Nailer can be installed as follows:
Remove the dust cap placed at the air inlet.
Install a 3/8 NPT male plug at the air inlet.
- A female coupler must be on the air hose.
The hose coupling (male plug–female coupler) must remove all pressure from the Nailer when disconnected.
Never use a non relieving coupler on the Nailer.

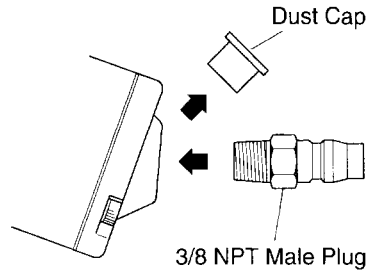

5. Air consumption

- Using the Air consumption table and the Air compressor size formula, find a correct compressor size.

Air consumption table

	psi	80	90	100
Operating pressure (bar)		(5.5)	(6.2)	(6.9)
	(kgf/cm ²)	(5.6)	(6.3)	(7)
Air consumption	ft ³ /cycle	.034	.038	.042
	(litr/cycle)	(.95)	(1.08)	(1.20)

Air compressor size formula

Amount of air required

=number of Nailers

×average nails driven each minute per Nailer

×air consumption at given air pressure

×safety factor (always 1.2)

Example: 3 Nailers (NT65AA) operating at 100 psi driving 30 Nails per minute.

Amount of air required

=3 × 30 × .042(1.20) × 1.2

=4.5 CFM (ft³/min)(129.6 ltr/min)

After making the calculations as shown above, you should find a compressor providing 4.5 CFM of air that is required.

LUBRICATION

It is important that the Nailer be properly lubricated.

Without proper lubrication, the Nailer will not work properly and parts will wear prematurely.

- Use Hitachi pneumatic tool lubricant.
Do not use detergent oil or additives. These lubricants will harm the O-rings and other rubber parts. This will cause the Nailer to malfunction.
- Filter-regulator-lubricator units should always be used. Keep the lubricator filled with Hitachi pneumatic tool lubricant.
- If a lubricator is not available, supply 2—3 drops of Hitachi pneumatic tool lubricant into the air plug on the Nailer twice a day.

COLD WEATHER CARE


- Do not store the Nailer in a cold weather environment. Keep the Nailer in a warm area until beginning the work.
- If the Nailer is already cold, bring it in a warm area and allow the Nailer to warm up before use.
 - ① Reduce the air pressure to 40 psi (2.8 bar 2.8 kgf/cm²).
 - ② Remove all nails from the Nailer.
 - ③ Connect the air hose and free-fire (blank-fire) the Nailer.
The lowered air pressure will be enough to free-fire the Nailer.
Slow speed operation tends to warm up the moving part.

⚠ CAUTION

- Do not free-fire the Nailer at high pressure.

TESTING THE NAILER

⚠ DANGER

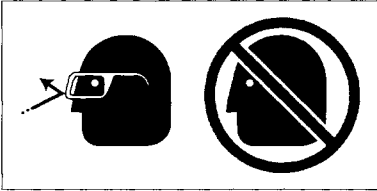

● Always wear eye protector.

⚠ WARNING


● Never use Nailer unless push lever is operating properly.

Before actually beginning the nailing work, test the Nailer by using the checklist below. Conduct the tests in the following order.


If abnormal operation occurs, stop using the Nailer and contact a Hitachi authorized service center immediately.

- (1) DISCONNECT AIR HOSE FROM NAILER
REMOVE ALL NAILS FROM NAILER.

- ☐ ALL SCREWS MUST BE TIGHTENED.
If any screws are loose, tighten them.

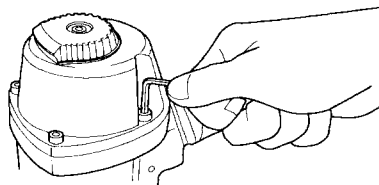

- ☐ THE PUSH LEVER AND TRIGGER MUST MOVE SMOOTHLY.

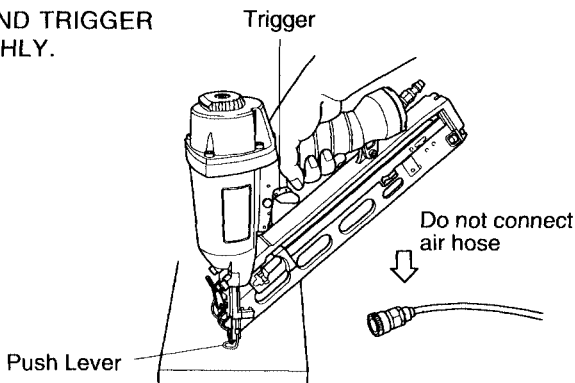


- (2) Adjust the air pressure to 70 psi (4.9 bar 5 kgf/cm²).
Connect the air hose.
Do not load any nails in the Nailer.

- ☐ THE NAILER MUST NOT LEAK AIR.


Hold the Nailer downward and pull the trigger.

- ☐ THE NAILER MUST NOT OPERATE.

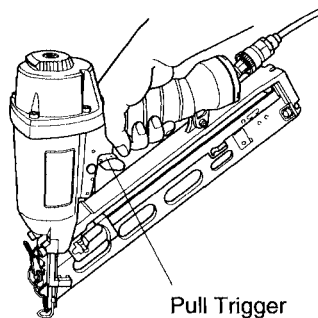

- (3) With finger off the trigger, depress the push lever against the workpiece.

- ☐ THE NAILER MUST NOT OPERATE.

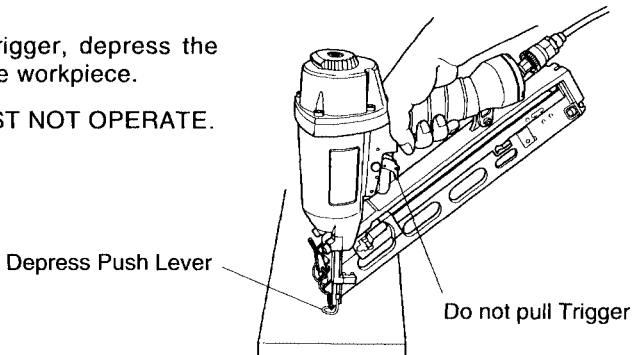

- (4) Without touching the trigger, depress the push lever against the workpiece.
Pull the trigger.

- ☐ THE NAILER MUST OPERATE.

- (5) With the Nailer off the workpiece, pull the trigger.
Depress the push lever against the workpiece.


☐ THE NAILER MUST OPERATE.

- (6) If no abnormal operation is observed, you may load nails in the Nailer.
Drive nails into the workpiece that is the same type to be used in the actual application.

☐ THE NAILER MUST OPERATE PROPERLY.

ADJUSTING AIR PRESSURE

WARNING

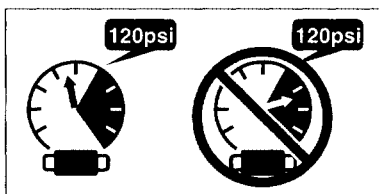

- Do not exceed 120 psi
(8.3 bar 8.5 kgf/cm²).

Adjust the air pressure at recommended operating pressure 70 — 120 psi (4.9 — 8.3 bar 5 — 8.5 kgf/cm²) according to the length of nails and the hardness of workpiece.


The correct air pressure is the lowest pressure which will do the job. Using the Nailer at a higher than required air pressure unnecessarily over stresses the Nailer.

LOADING NAILS


WARNING

- When loading nails into Nailer,
 - 1) do not pull trigger;
 - 2) do not depress push lever; and
 - 3) keep Nailer pointed downward.


- (1) Insert nail strip into rear of magazine.

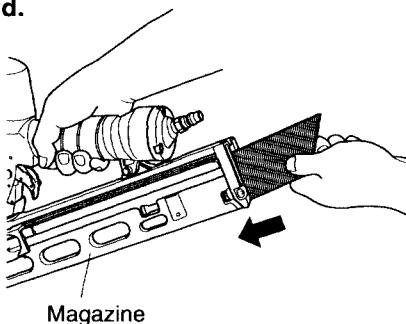

- (2) Slide the nail strip forward in the magazine.
The nail strip should pass the nail stopper.

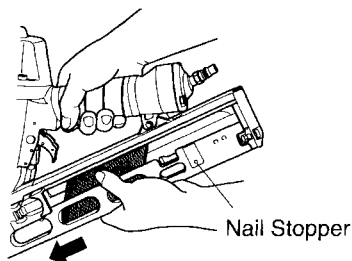


- (3) Pull the nail feeder (B) back to engage the nail feeder (A) to the nail strip.

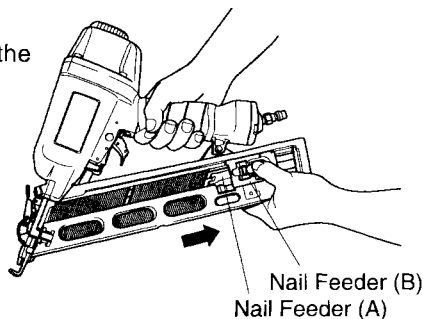

- (4) Removing the nails :

- ① Depress the nail feeder (A) slightly and slowly slide the nail feeder (B) forward.
- ② Remove the nails from the Nailer.

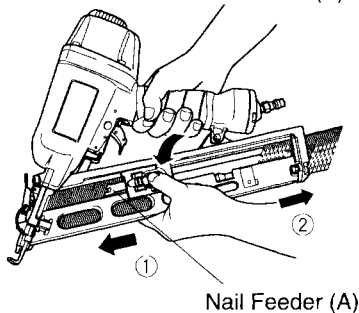

NOTE:


- Use nails at least 5 nails remaining.



NAILER OPERATION

Read section titled "SAFETY" (pages 4-7).

⚠ DANGER

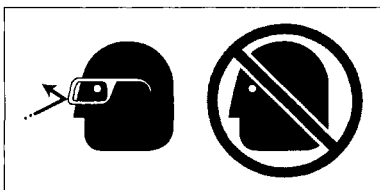

- Always wear eye protector which conforms to ANSI Z87. 1 specifications.

⚠ WARNING

- **Never point Nailer toward yourself or anyone else.**
- **Never carry with finger on trigger.**
Remove finger from trigger when not driving nails.
- **Never place your hands or feet closer than 8 inches (200mm) from firing head when using.**
- **Do not drive nails on top of other nails or with Nailer at too steep of an angle; nails can ricochet and hurt someone.**
- **In order to avoid double fire or unwanted ejection of a nail due to bouncing of the Nailer.**
 - 1) do not push Nailer on workpiece with strong force;
 - 2) take Nailer away from workpiece using recoil;
 - 3) release trigger quickly when performing trigger fire.
- **Do not drive nails into thin boards or near corners and edges of workpiece. Nails can be driven through or away from workpiece and hit someone.**
- **Never drive nails from both sides of a wall at the same time. Nails can be driven into and through the wall and hit a person on the opposite side.**
- **Never use Nailer which is defective or operating abnormally.**
- **Do not use Nailer as hammer.**
- **Disconnect air hose from Nailer when:**
 - 1) attaching or removing nose cap;
 - 2) it is not in use;
 - 3) leaving work area;
 - 4) moving it to another location; and
 - 5) handing it to another person.

This Hitachi nailer has a STANDARD CONTACT TRIP MECHANISM (Bounce Fire). An OPTIONAL SEQUENTIAL TRIP MECHANISM kit (SINGLE SHOT) is available as order part number 880414.

THE STANDARD CONTACT TRIP MECHANISM (Bounce Fire) is for use where rapid fastener placement is desired and must be operated in accordance with the following "Methods of Operation".


METHODS OF OPERATION

This Nailer is equipped with the push lever and does not operate unless the push lever is depressed (upward position).

There are two methods of operation to drive nails with this Nailer.

They are:

1. Intermittent operation (Trigger fire);
 2. Continuous operation (Push lever fire);
- (1) Intermittent operation (Trigger fire)
- ① Position the nail outlet on the workpiece with finger off the trigger.

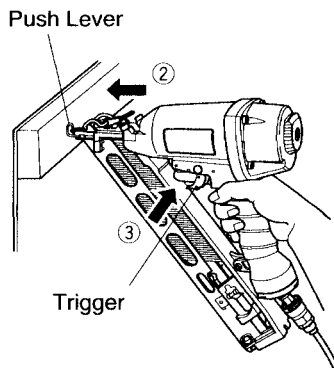


- ② Depress the push lever firmly until it is completely depressed.
- ③ Pull the trigger to drive a nail.
- ④ Remove finger from the trigger.

To drive another nail, move the Nailer along the workpiece and repeat this procedure.

(2) Continuous operation (Push lever firing)

- ① Pull the trigger with the Nailer off the workpiece.
- ② Depress the push lever against the workpiece to drive a nail.
- ③ Move the Nailer along the workpiece with a bouncing motion.
Each depression of the push lever will drive a nail.

As soon as the desired number of nails have been driven, remove finger from the trigger.

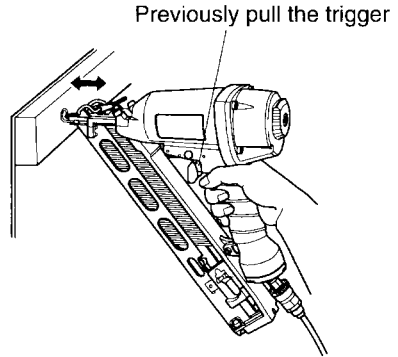

⚠ WARNING

- **Keep your finger off the trigger except during fastening operation, because serious injury could result if the push lever accidentally contacts you or others in work area.**
- **Keep hands and body away from the discharge area. The nailer with contact trip mechanism may bounce from the recoil of driving a fastener and unwanted subsequent fastener may be driven, possibly causing injury.**

The OPTIONAL SEQUENTIAL TRIP MECHANISM (SINGLE SHOT PARTS) is for use where precision fastener placement is desired and must be operated in accordance with the following "Method of Operation".

You must first depress the push lever (upward position) where you want to drive a nail and then pull the trigger. After the each nail is driven, completely release the trigger and lift the tool off the work surface.

An OPTIONAL SEQUENTIAL TRIP MECHANISM may reduce the possibility of bodily injury to you or others in the work area. This is because it is less likely to drive an unwanted nail if you keep the trigger pulled and accidentally bump the push lever against yourself or others. An OPTIONAL SEQUENTIAL TRIP MECHANISM may also reduce the speed of operation compared to the standard contact trip mechanism.

NOTE:

- Both STANDARD CONTACT TRIP MECHANISM and OPTIONAL SEQUENTIAL TRIP MECHANISM are safe it used as described above and according to all warnings and instructions.
- Always handle nails and package carefully. If nail strips are dropped, collating bond may be broken, which will cause mis-feeding and jamming.

- After nailing:
 - 1) disconnect air hose from the Nailer;
 - 2) remove all nails from the Nailer;
 - 3) supply 2—3 drops of Hitachi pneumatic tool lubricant into the air plug on the Nailer; and
 - 4) open the petcock on the air compressor tank to drain any moisture.

ADJUSTING THE NAILING DEPTH


To assure that each nail penetrates to the same depth, be sure that :

- 1) the air pressure to the Nailer remains constant (regulator is installed and working properly), and
- 2) the Nailer is always held firmly against the workpiece.

If nails are driven too deep or shallow into the workpiece, adjust the nailing in the following order.


- ① DISCONNECT AIR HOSE FROM NAILER.
- ② If nails are driven too deep, turn the adjuster to the shallow side.

Adjustments are in half-turn increments.

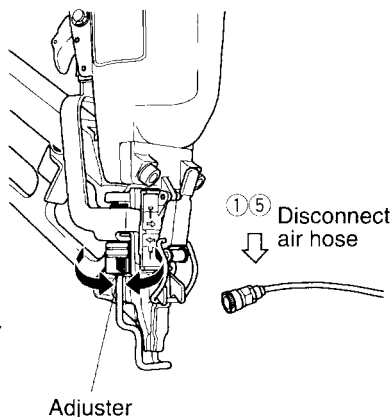

If nails are driven too shallow, turn the adjuster to the deep side.

- ③ Stop turning the adjuster when a suitable position is reached for a nailing test.
- ④ Connect the air hose.
ALWAYS WEAR EYE PROTECTOR.
Perform a nailing test.
- ⑤ DISCONNECT AIR HOSE FROM NAILER.
- ⑥ Choose a suitable position for the adjuster.

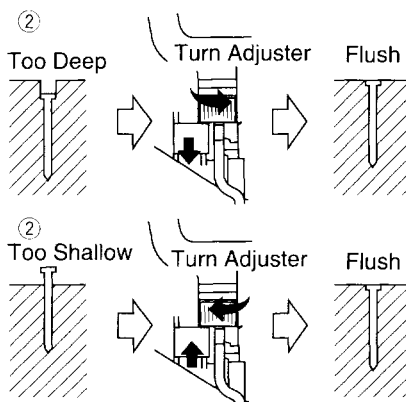

USING THE BLOW NOZZLE (only for Model NT65MA)


⚠ WARNING

- Be sure to release your finger from the trigger before using the blow nozzle.
- Do not point the air outlet at a person.
- Do not use the blow nozzle with the push lever left fit.

This Nailer has a blow nozzle that blows out wood shavings which occur during work. Press the knob with your thumb to use the blow nozzle, as shown in the figure.


NOTE:

- When the blow nozzle is used for a long time, the nailing force may degrade temporarily. In this case, allow the air supply pressure to stabilize before starting work.
- Note that the lubricant applied to the drain in the air hose or to the Nailer may spurt out from the air outlet.

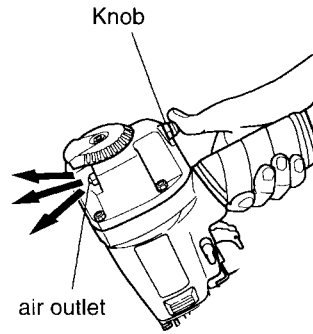

CHANGING THE EXHAUST DIRECTION


The direction of the exhaust vent can be changed by turning the top cover.

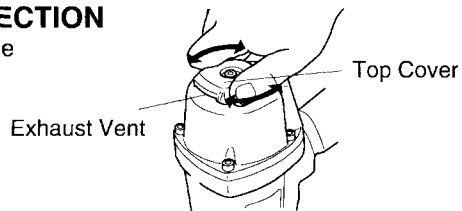

USING THE NOSE CAP

If you like to protect the surface of work-piece against scratches or markings made by the push lever, attach the accessory nose cap to the push lever.

- ① DISCONNECT AIR HOSE FROM NAILER.
- ② Put the nose cap to the toe of the push lever.
- ③ The nose cap is marked to indicate the exit point of the nail, making alignment easier.

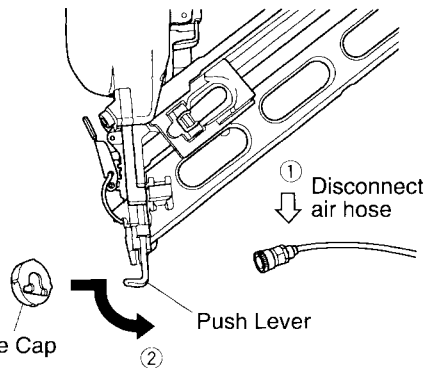

NOTE:

- The nose cap may reduce nailing depth due to its thickness. Re-adjustment of nailing depth is required.

MAINTENANCE

NOTE:

The information contained in this Manual is designed to assist you in the safe maintenance of the Nailer.

Some illustrations in this Manual may show details or attachments that differ from those on your own Nailer.

MAINTENANCE AND INSPECTION

Read section titled "SAFETY" (pages 4-7).

⚠ WARNING


- **Disconnect air hose and remove all nails from Nailer when:**

- 1) **doing maintenance and inspection; and**
- 2) **clearing jam.**

1. Clearing a jam


Remove a jammed nail in the following order:

- ① **DISCONNECT AIR HOSE.**
- ② Remove all nails.
- ③ Release the lock lever and open guide plate (A).
- ④ Remove the jammed nail with a slotted-head screwdriver.
- ⑤ Close guide plate (A) and latch.
- ⑥ In case of frequent jam, contact a Hitachi authorized service center.

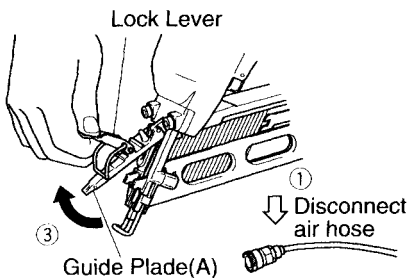


2. Inspecting the magazine.

- ① **DISCONNECT AIR HOSE.**
- ② Clean the magazine. Remove dust which may have accumulated in the magazine
- ③ Lubricate the nail rail with Hitachi pneumatic tool lubricant.

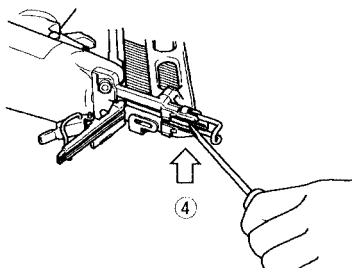

3. Storing

- When not in use for an extended period, apply a thin coat of the lubricant to the steel parts to avoid rust.
- Do not store the Nailer in a cold weather environment. Keep the Nailer in a warm area.

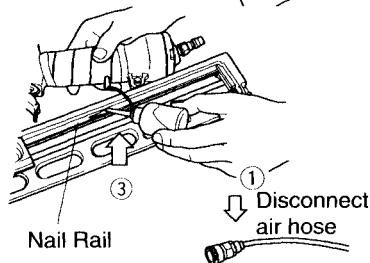


- When not in use, the Nailer should be stored in a warm and dry place. Keep out of reach of children.

4. WARNING LABEL

Change the WARNING LABEL if missing or damaged. A new WARNING LABEL is available from a Hitachi authorized service center.

- 5. Maintenance chart ...See page 22.
- 6. Operator troubleshooting...See page 23.

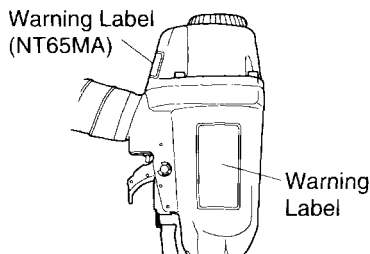

SERVICE AND REPAIRS

⚠ WARNING

- Only service personnel trained by Hitachi, distributor or employer shall repair the Nailer.
- Use only parts supplied or recommended by Hitachi for repair.

All quality Nailers will eventually require servicing or replacement of parts because of wear from normal use.

NOTE:

Specifications are subject to change without any obligation on the part of HITACHI.




Maintenance chart

ACTION	WHY	HOW
Drain air line filter daily.	Prevent accumulation of moisture and dirt.	Open manual petcock.
Keep lubricator filled.	Keep the Nailer lubricated.	Fill with Hitachi pneumatic tool lubricant.
Clean filter element—then blow air through filter in direction opposite to normal flow.	Prevent clogging of filter with dirt.	Follow manufacturer's instructions.
Clean magazine and feeder mechanism.	Prevent a jam.	Blow clean daily.
Keep push lever working properly.	Promote operator safety and efficient Nailer operation.	Blow clean daily.
Lubricate the Nailer after nailing.	Extend the Nailer life.	Supply 2—3 drops of lubricant into the Nailer.
Drain air compressor.	Keep the Nailer operated properly.	Open petcock on air compressor tank.

Operator troubleshooting

Most minor problems can be resolved quickly and easily using the table below.
If problems persist, contact a Hitachi authorized service center for assistance.

PROBLEM	CHECK METHOD	CORRECTION
Nailer operates but no nail is driven.	Check for a jam.	Clean a jam per page 21.
	Nail feeder damaged ?	Replace nail feeder.
	Ribbon spring weakened or damaged ?	Replace ribbon spring.
	Check for proper nails.	Use only recommended nails.
Weak drive. Slow to cycle.	Check air pressure.	Increase air pressure. (Do not exceed 120 psi (8.3 bar 8.5 kgf/cm ²))
	Check position of nailing depth adjustment adjuster.	Readjust per page 19.
	—	Use Hitachi pneumatic tool lubricant.
	Driver blade worn ?	Contact Hitachi for replacement.
	Piston ring worn or damaged ?	
Drives too deep.	Check air pressure.	Reduce air pressure. (Adjust 70-120 psi)
	Check position of nailing depth adjustment guide plate (A).	Readjust per page 19.
Skipping nails. Intermittent feed.	Check for proper nails.	Use only recommended nails.
	—	Lubricate the nail rail per page 21.
	Nail feeder damaged ?	Replace nail feeder.
	Ribbon spring weakened or damaged ?	Replace ribbon spring.
	Piston ring worn or damaged ?	Contact Hitachi for replacement.
Nails jam. Driven nail is bent.	Check for proper nails.	Use only recommended nails.
	—	Lubricate the nail rail per page 21.
	Driver blade worn ?	Contact Hitachi for replacement.
Drives properly during normal operation, but does not drive fully at faster nailing speeds.	Check inside diameter of air hose.	Use larger air hose.

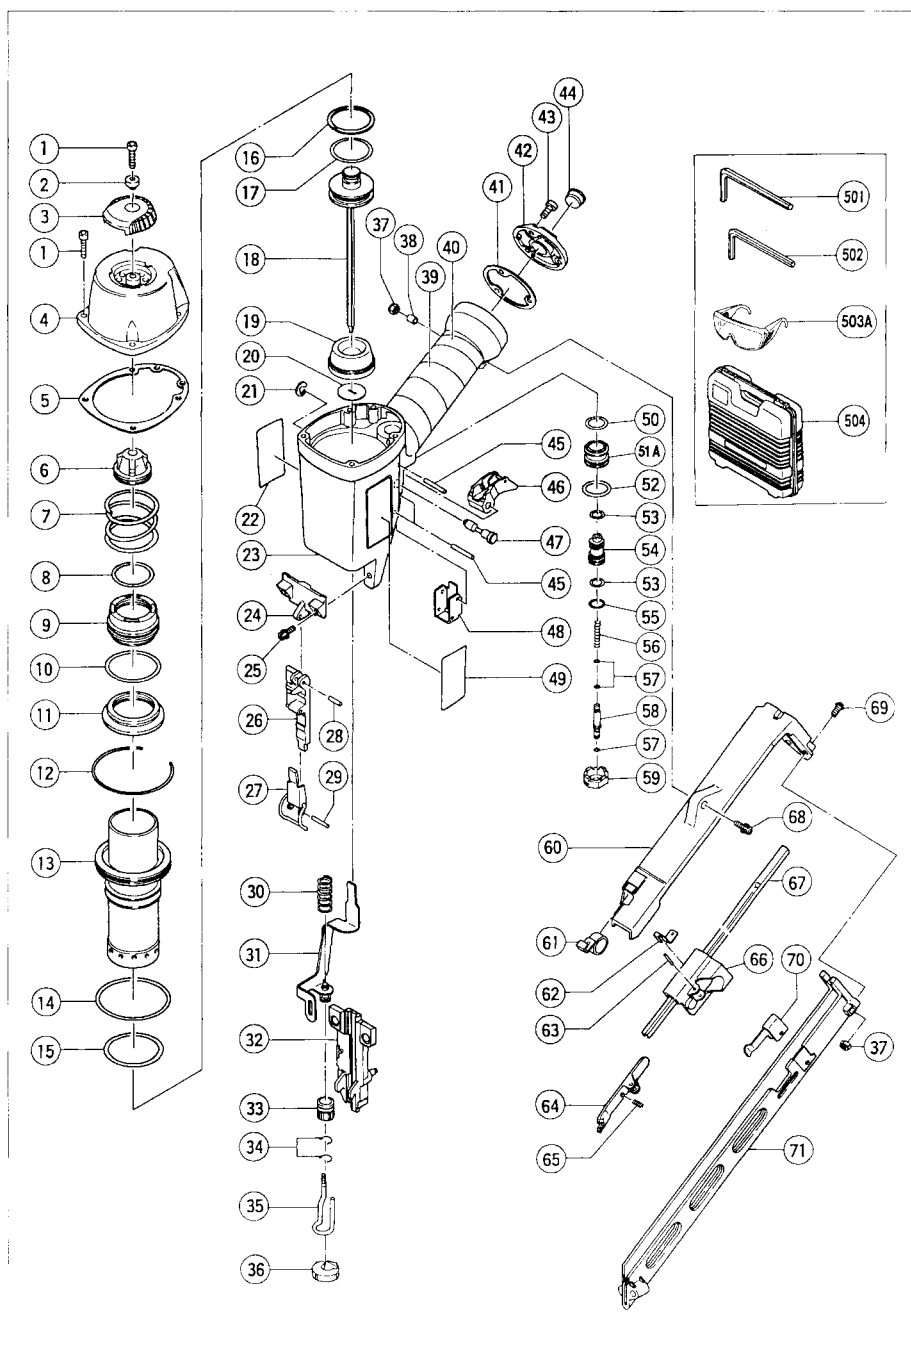


NT65AA

Item No.	Code No.	Part Name	Qty
1	949-757	Hex. Socket Hd. bolt M5x20	5
2	880-360	Sleeve	1
3	881-762	Top Cover (A)	2
4	880-385	Exhaust Cover	1
5	880-358	Gasket	1
6	881-761	Exhaust Valve Rubber (A)	1
7	880-356	Head Value Spring	1
8	980-879	O-Ring (S-34)	1
9	880-354	Head Valve	1
10	878-714	Cylinder O-Ring (C) I. D 44. 7	1
11	881-760	Head Valve Rubber (A)	1
12	880-669	Rataining	1
13	881-759	Cylinder	1
14	877-312	Cylinder O-Ring (I. D 63. 1)	1
15	878-716	O-Ring (P-46)	1
16	881-740	Piston Ring	1
17	880-311	O-Ring (I. D 34. 2)	1
18	881-763	Piston	1
19	881-741	Piston Bumper	1
20	881-756	Bumper Sheet	1
21	955-479	Retaining Ring (E-Type) For D6 Shaft	1
22	878-184	Warning Label	1
23	881-757	Body Ass'y	1
24	881-764	Guide Plate (B)	1
25	949-661	Hex. Socket Hd. Bolt M6x30	2
26	881-743	Guide Plate (A)	1
27	881-747	Lock Lever	1
28	949-770	Roll Pin D4x14	1
29	949-685	Roll Pin D3x20	1
30	877-894	Holder Spring	1
31	881-749	Push Lever (B)	1
32	881-742	Blade Guide	1
33	881-748	Adjuster	1
34	881-765	Ratchet Spring	1
35	881-750	Push Lever (A)	1
36	881-751	Nose Cap (A)	1
37	877-371	Nylon Nut M5	1
38	881-774	Sleeve	1
39	881-768	Grip Tape (A)	1
40	880-407	Tape	2
41	881-769	Gasket (B)	1
42	881-758	Cap (A)	1
43	949-821	Hex. Socket Hd. Bolt M5x16	3
44	872-035	Dust Cap	1
45	949-865	Roll Pin D3x28	1

Item No.	Code No.	Part Name	Qty
46	880-674	Trigger (A)	1
47	881-771	Trigger Pin	1
48	880-361	Pushing Lever Guide	1
49	881-776	Nameplate	1
50	877-699	Head Valve O-Ring (I. D 16. 8)	1
51A	878-881	Valve Bushing	1
52	878-885	O-Ring (S-18)	1
53	878-925	O-Ring (I. D 8. 8)	2
54	878-922	Valve Piston	1
55	878-887	O-Ring (I. D 11)	1
56	878-884	Plunger Spring	1
57	878-888	O-Ring (I. D 1. 8)	3
58	881-770	Plunger	1
59	881-671	Valve Bushing (A)	1
60	881-752	Magazine Cover	1
61	881-755	Ribbon Spring	1
62	881-745	Feeder Plate	1
63	881-767	Roll Pin D2.5x20	1
64	881-746	Nail Feeder (A)	1
65	881-321	Pushing Spring	1
66	881-744	Nail Feeder (B)	1
67	881-753	Nail Rail	1
68	881-773	Hex. Socket Hd. Bolt (W/Flange) M5x20	1
69	881-772	Machine Screw (W/Washer) M5x16	2
70	881-766	Nail Stopper	1
71	881-754	Magazine	1
501	944-459	Allen Wrench 5MM	1
502	944-458	Allen Wrench 4MM	1
503A	875-769	Eye Protector	1
504	881-775	Case	1

Parts are subject to change without any obligation on the part of the HITACHI due to improvements.

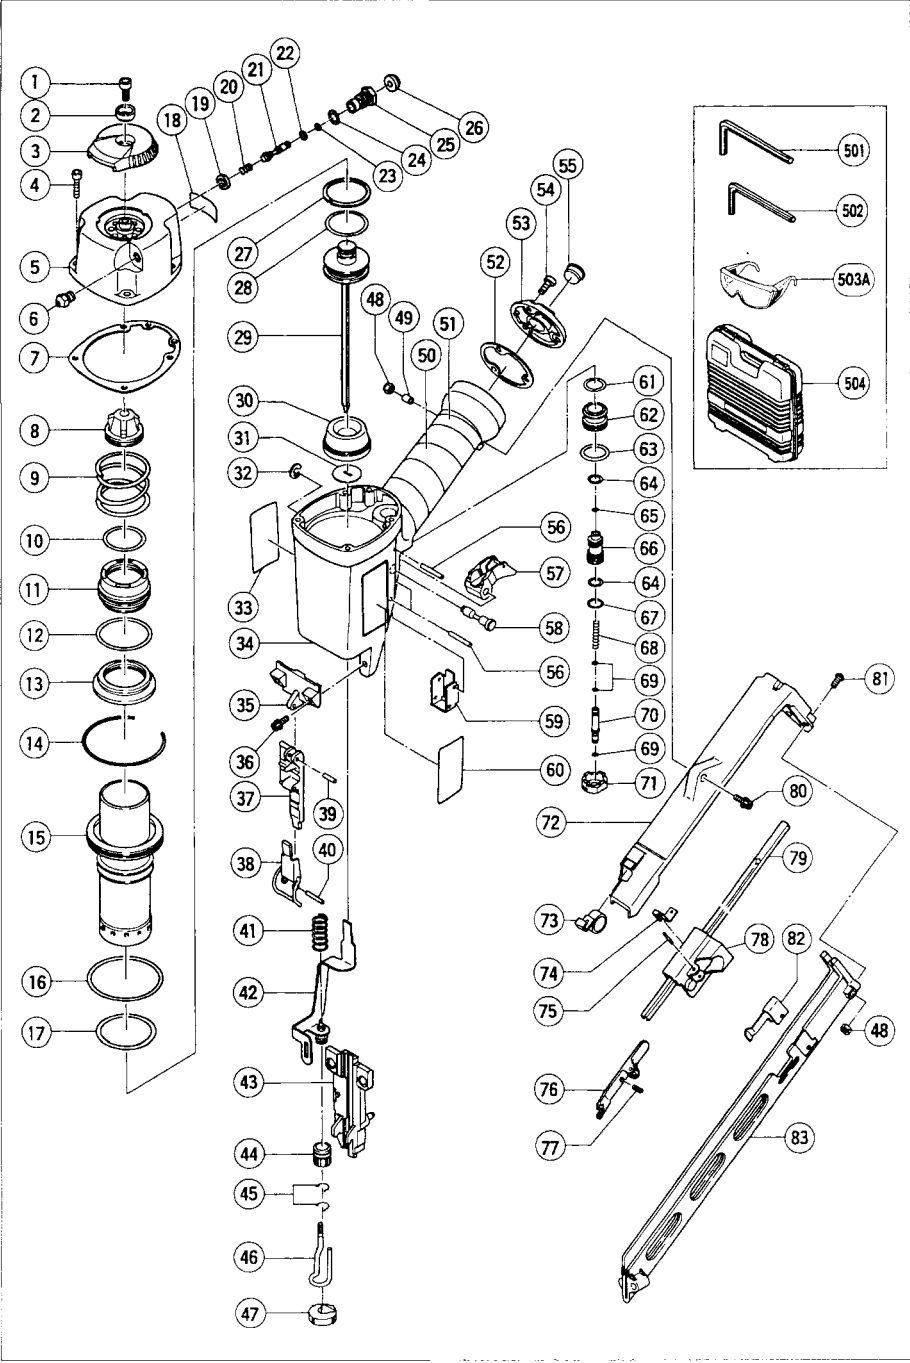

NT65MA

Item No.	Code No.	Part Name	Qty	Item No.	Code No.	Part Name	Qty
1	949-755	Hex. Socket Hd. Bolt M6X16	1	46	881-750	Pushing Lever (A)	1
2	880-515	Plate	1	47	881-751	Nose Cap (A)	1
3	880-514	Top Cover	1	48	877-371	Nylon Nut	3
4	949-757	Hex. Socket Hd. Bolt M5X20	4	49	881-774	Sleeve	1
5	882-940	Exhaust Cover	1	50	881-768	Grip Tape (A)	1
6	881-714	Nose	1	51	880-407	Tape	2
7	880-358	Gasket	1	52	881-769	Gasket (B)	1
8	881-761	Exhaust Valve Rubber (A)	1	53	881-758	Cap (A)	1
9	880-356	Head Valve Spring	1	54	949-821	Hex. Socket Hd. Bolt M5X16	3
10	980-879	O-Ring (S-34)	1	55	872-035	Dust Cap	1
11	880-354	Head Valve	1	56	949-865	Roll Pin D3X28	3
12	878-714	Cylinder O-Ring (C) I.D. 44.7	1	57	880-674	Trigger (A)	1
13	881-760	Head Valve Rubber (A)	1	58	881-771	Trigger Pin	1
14	880-669	Retaining Ring	1	59	880-361	Pushing Lever Guide	1
15	881-759	Cylinder	1	60	—	Name Plate	1
16	877-312	Cylinder O-Ring (I.D 63.1)	1	61	877-699	Head Valve O-Ring (I.D 16.8)	1
17	878-716	O-Ring (P-46)	1	62	881-777	Valve Bushing (B)	1
18	—	Caution Plate	1	63	878-885	O-Ring (S-18)	1
19	881-711	Valve Packing	1	64	878-925	O-Ring (I.D 8.8)	2
20	881-900	Spring	1	66	878-922	Value Piston	1
21	881-712	Plunger	1	67	878-887	O-Ring (I.D 11)	1
22	873-093	O-Ring (1AP-3)	1	68	878-884	Plunger Spring	1
23	881-715	O-Ring (S3)	1	69	878-888	O-Ring (I.D 1.8)	3
24	987-105	O-Ring (S-10)	1	70	881-770	Plunger	1
25	881-710	Valve Bushing	1	71	880-671	Value Bushing (A)	1
26	881-713	Knob	1	72	881-752	Magazine Cover	1
27	881-740	Piston Ring	1	73	881-755	Ribbon Spring	1
28	880-311	O-Ring (I.D 34.2)	1	74	881-745	Feeder Plate	1
29	881-763	Piston	1	75	881-767	Roll Pin D2.5X20	1
30	881-741	Piston Bumper	1	76	881-746	Nail Feeder (A)	1
31	881-756	Bumper Sheet	1	77	880-321	Pushing Spring	1
32	955-479	Retaining Ring (E-Type) For D6 Shaft	1	78	881-744	Nail Feeder (B)	1
33	878-184	Warning Label	1	79	881-753	Nail Rail	1
34	881-757	Body Ass'y	1	80	881-773	Hex. Socket Hd. Bolt (W/Flange) M5X20	1
35	881-764	Guide Plate (B)	2	81	881-772	Machine Screw (W/Washer) M5X16	2
36	949-661	Hex. Socket Hd. Bolt M6X30	1	82	881-766	Nail Stopper	1
37	881-743	Guide Plate (A)	1	83	881-754	Magazine	1
38	881-747	Lock Lever	1	501	944-459	Hex. Bar Wrench 5MM	1
39	881-770	Roll Pin D4X14	1	502	944-458	Hex. Bar Wrench 4MM	1
40	949-685	Roll Pin D3X20	1	503A	875-769	Eye Protector	1
41	877-894	Holder Spring	1	504	881-775	Case	1
42	881-749	Pushing Lever (B)	1				
43	881-742	Blade Guide	1				
44	881-748	Adjuster	2				
45	881-765	Ratchet Spring	1				

Parts are subject to change without any obligation on the part of the HITACHI due to improvements.

Issued by

Hitachi Koki Co., Ltd.

Shinagawa Intercity Tower A, 15-1, Konan 2-chome,
Minato-ku, Tokyo 108-6020, Japan

Distributed by

Hitachi Koki U.S.A., Ltd.

3950 Steve Reynolds Blvd.
Norcross, GA 30093

Hitachi Koki Canada Co.

6395 Kestrel Road
Mississauga ON L5T 1Z5

001

Code No. C99096561 A

Printed in Japan